

Legend

- Existing Building
- Existing Monitoring Well Location
Groundwater Elevation (Feet ASL)
- Groundwater Contours
Contour Interval = 1ft

Note: All monitoring well locations are shown on this figure. However, only the wells used to generate the groundwater elevation contours are labeled.

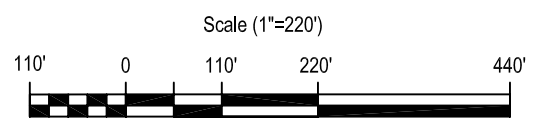


Figure 8B - Groundwater Elevation Contour Map for Deep Overburden - April 2003 Former Raytheon Site - Wayland, MA

