




PCE Concentration Contours
Method 1 GW-1 Standard 5 ug/L

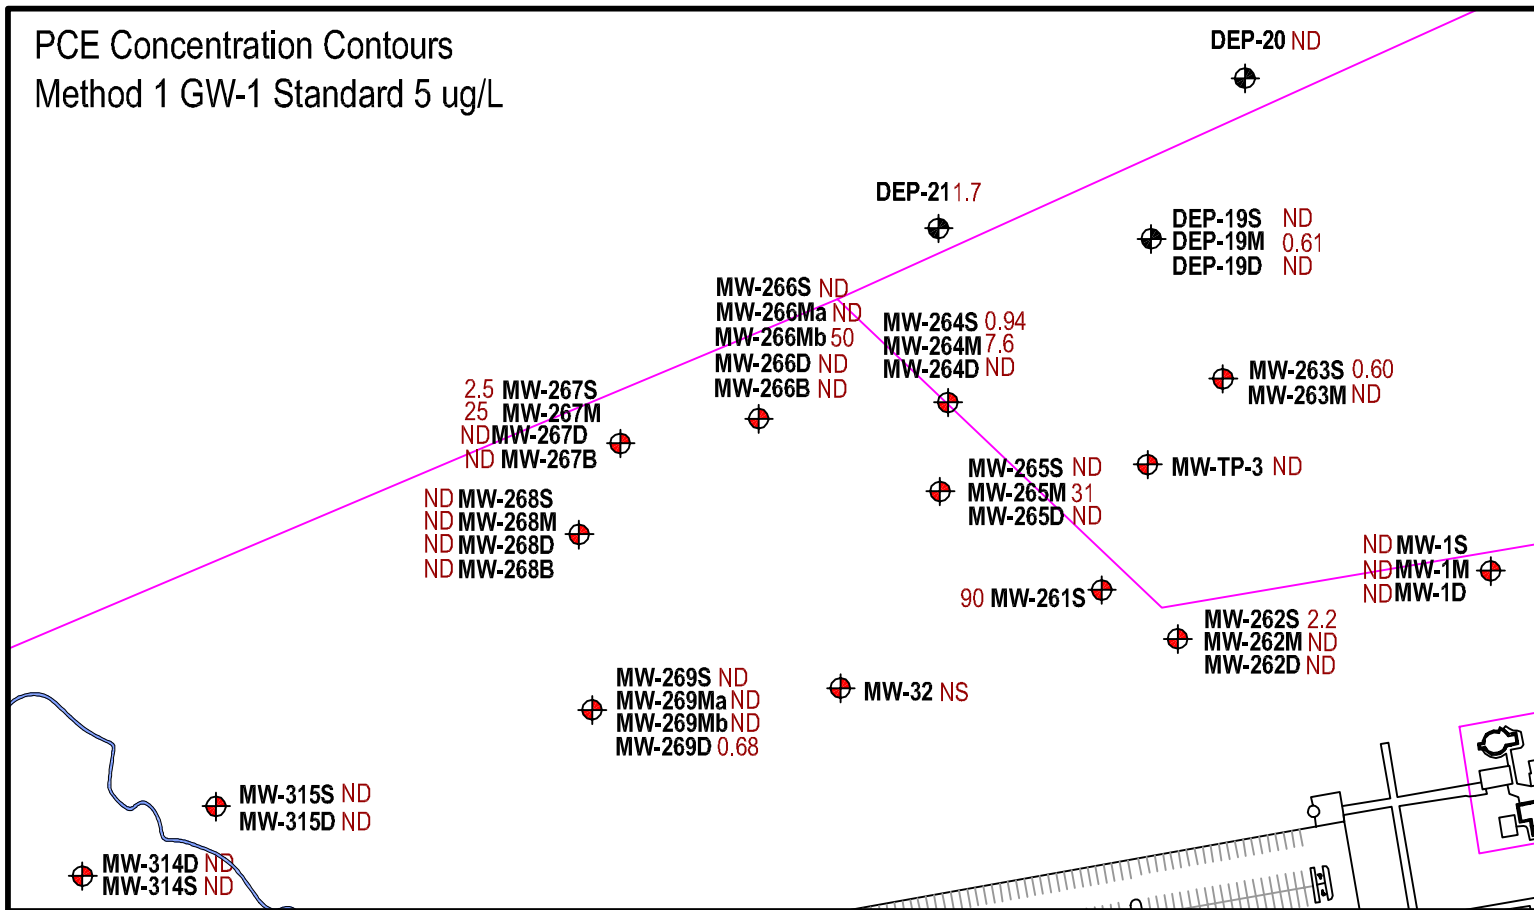



TCE Concentration Contours
Method 1 GW-1 Standard 5 ug/L

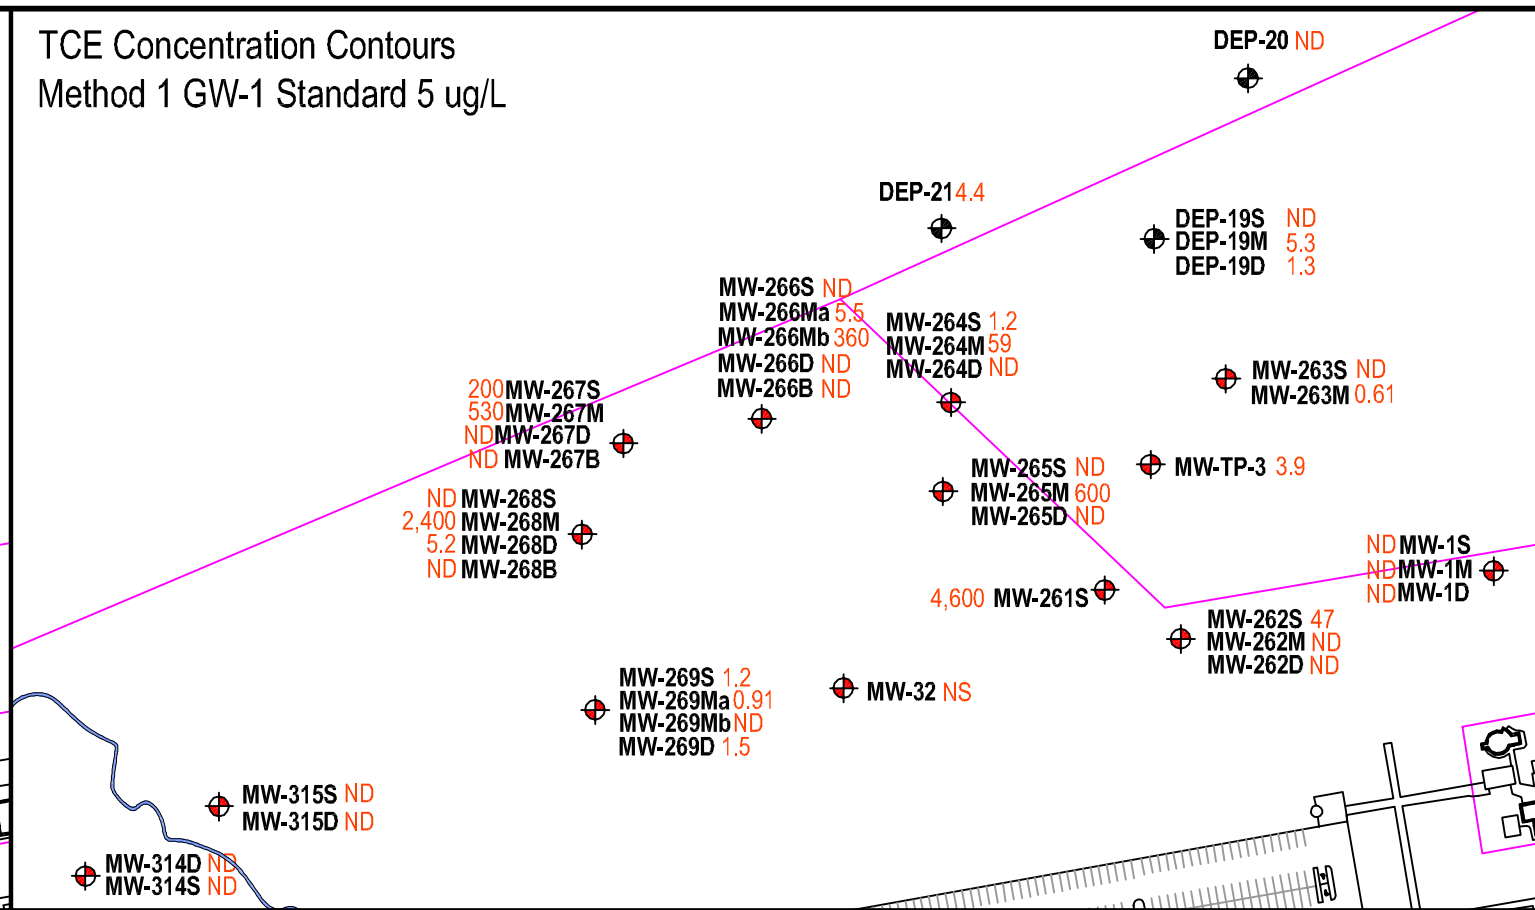

cDCE Concentration Contours
Method 1 GW-1 Standard 70 ug/L

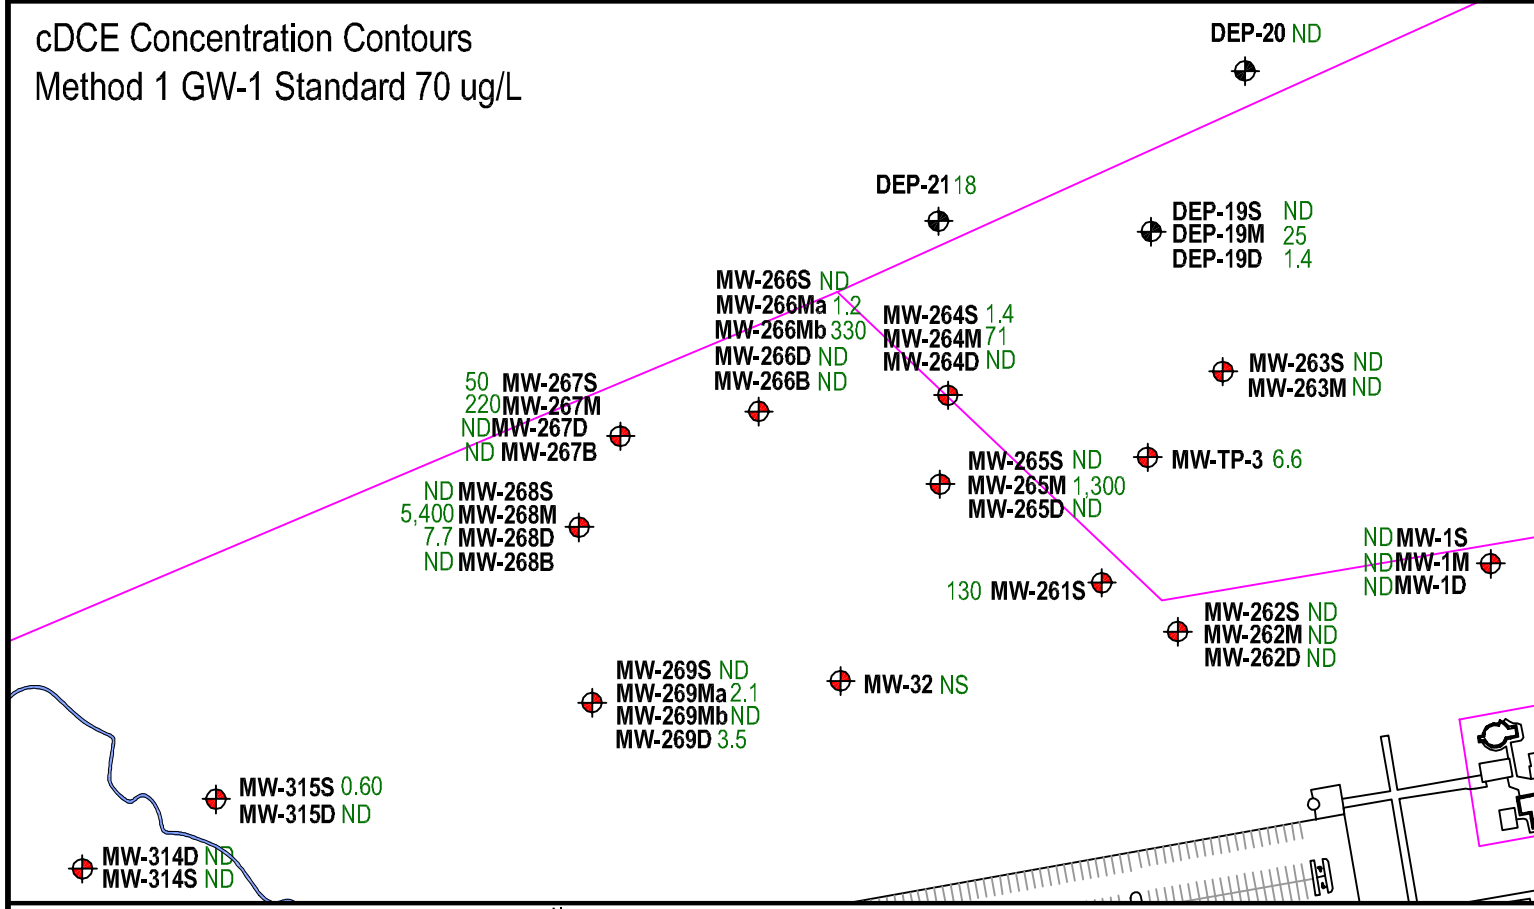

VC Concentration Contours
Method 1 GW-1 Standard 2 ug/L

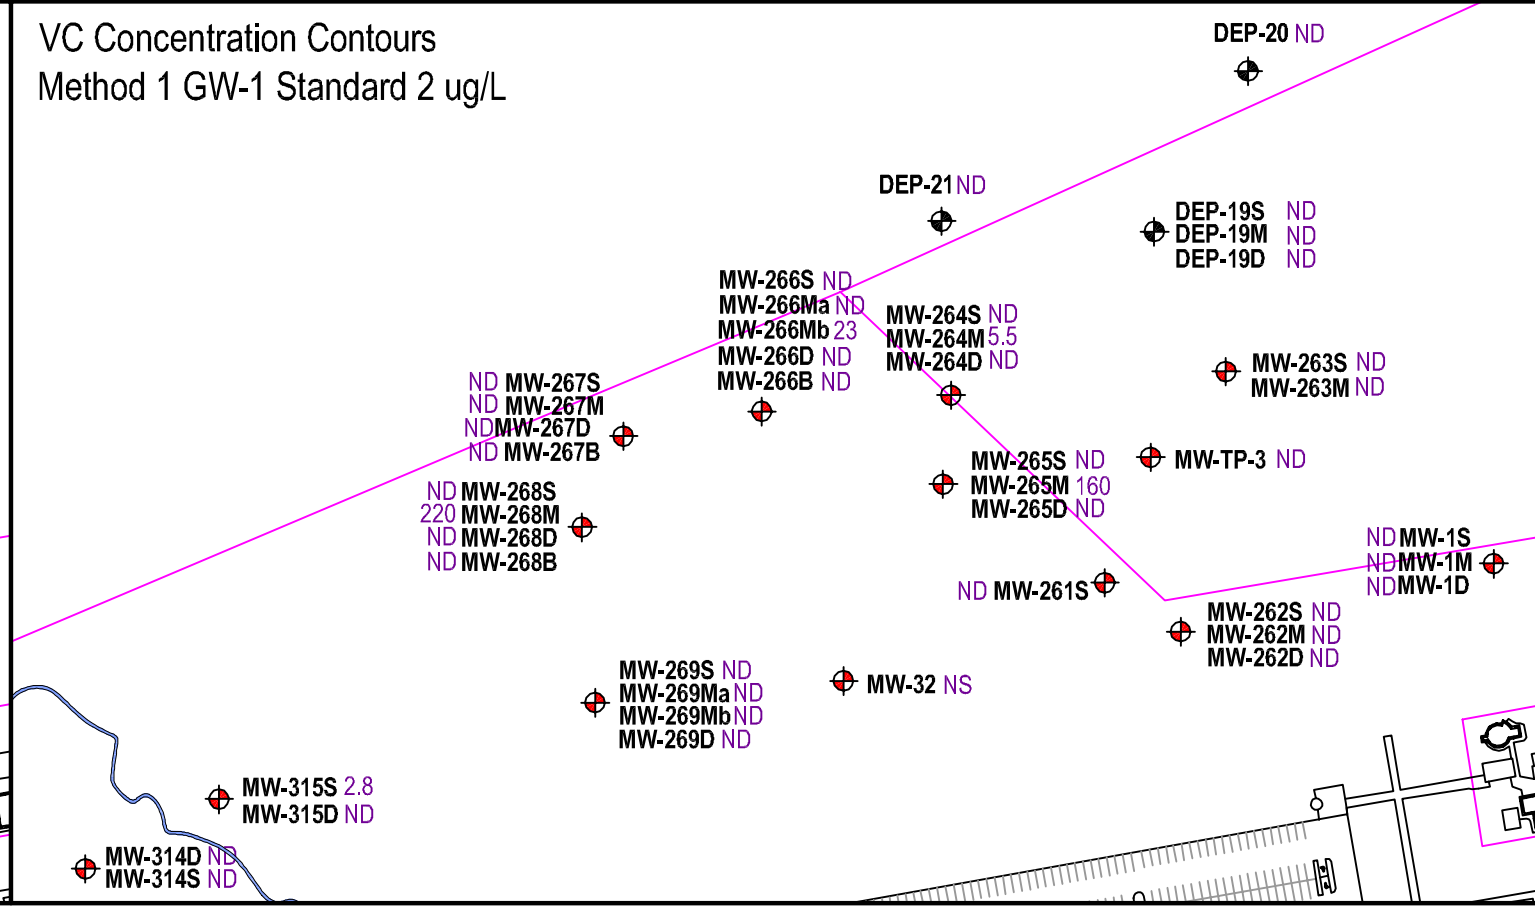

Symbol	Description
— (pink line)	Property Line
● (red)	Monitoring Well or Well Cluster Location
● (black)	DEP Monitoring Well Location
3.9	PCE Concentration (ug/L)
45	TCE Concentration (ug/L)
103	cDCE Concentration (ug/L)
4.9	VC Concentration (ug/L)
ND	Not Detected
NS	Not Sampled

Figure 6 - Northern Area CVOC Concentration Map
(Most Recent Data 2004)
Former Raytheon Facility - Wayland, MA



R:\Raytheon\Wayland - 1922\REPORT - Phase 2 (SOV) AND Dec 04 GW Memo\Raytheon Northern area.dwg (04/25/2005 - 2:46pm Boston)